


INSTRUCTION MANUAL

Electronic Lock – 6 Button

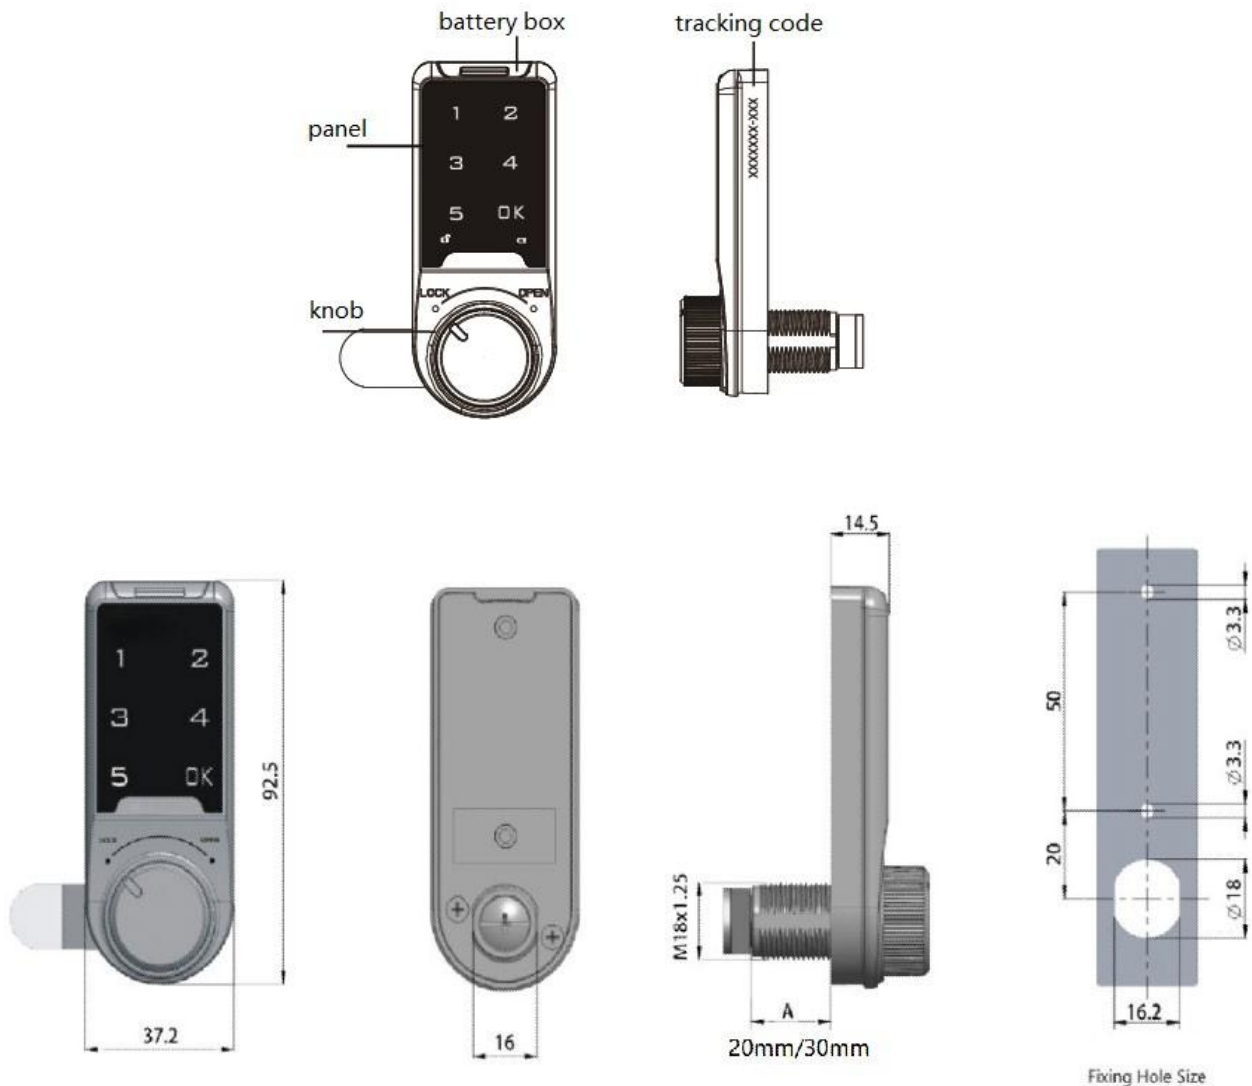

1. Default settings

This lock has two modes: Private Mode & Public Mode

Default mode: Private Mode

Default master password: 4321, default user password: 1234

Once using master password to open the lock, user password will automatically change to default password 1234

2. Operation under Private Mode (the lock is in normal“close” state

) a. How to open the door:

Input user password “1234+ OK” or master password
 “4321+ OK” Green indicator  is on, rotate the knob to
 “OPEN” state How to lock the door: rotate the knob to “
 LOCK” state

- b. How to change user password or master password: Input user password "1234+ OK" (for user password change) or input master password "4321+ OK" (for master password change)
Green indicator  is on, press "OK" again for >3 seconds, green indicator  flashes, input new password + OK, like "123123+ OK", you will hear a long sound "di...", new password is set up.

*Password consist of 4-15 digits, master password can't be same as user password.

3. Operation under Public Mode (the lock is in normal "open" state)

- a. How to change to Public Mode:
Input master password + OK, like "4321+OK", green indicator  is on
Press "OK" again for >3 seconds, green indicator  flashes, press "OK" again
Input digit "44 + OK", you will hear a long sound "di...", it changes to Public Mode now.
- b. How to set temporary password:
Press "OK" button, green indicator  flashes
Input new password + OK, you will hear a long sound "di...", green indicator  is on, temporary password is set up.
- Rotate the knob to "OPEN" and store your belongings, lock the door.
Under state of "temporary password", green indicator  flashes every 3 seconds.

- c. How to open the door:
Input temporary password + OK, green indicator  is on, rotate the knob to "OPEN".
Temporary password is invalid automatically after using.
- d. How to change to Private Mode:
Input master password + OK, like "4321+OK", green indicator  is on
Press "OK" again for >3 seconds, green indicator  flashes, press "OK" again
Input digit "43 + OK", you will hear a long sound "di...", it changes to Private Mode now.

4. How to start or close function of virtual password (anti-peeping password)

This function is closed in default setting.

Input master password + OK, green indicator  is on
Press "OK" again for >3 seconds, green indicator  flashes, press "OK" again
Start function - input digit "42 + OK", you will hear a long sound "di..."
Close function - input digit "41 + OK", you will hear a long sound "di..."

Under this function, you can input some irrelevant digits before or after actual password (total 16 digits) , as long as the entire input sequence contains continuous, unbroken real password, the system can recognize and unlock it.

For example, if the correct password is 1234, input either 789123456 or 00123499, it can open the lock.

5. Other important information

- a. If you forget user password and master password, please provide tracking code on the lock body to distributor, distributor will provide password to open the lock, then it will restore to default setting.
- b. Input wrong password 4 times continuously, the panel will be locked for 60 seconds.
- c. If battery power is low, battery indicator  will be on, please replace battery (CR2032).